








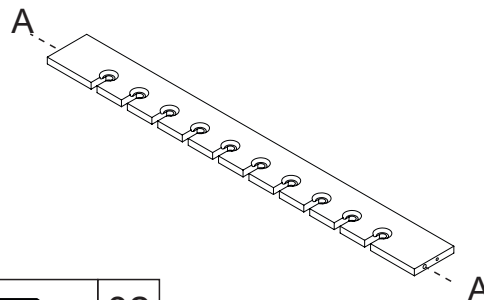



Lista de ferramentas  
não fornecidas mas  
necessárias para a  
montagem do produto:




A	 8X30	02
B	 7X60	10
C	 3,5X16	04
D	 PREGO	20
E	 4X35	02
F	 BUCHA	02
G		02
H		01



01




A	 8X30	02
---	---	----

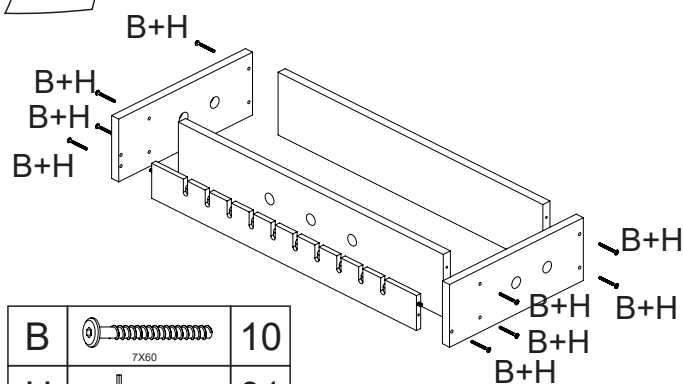02




B	 7X60	10
H		01

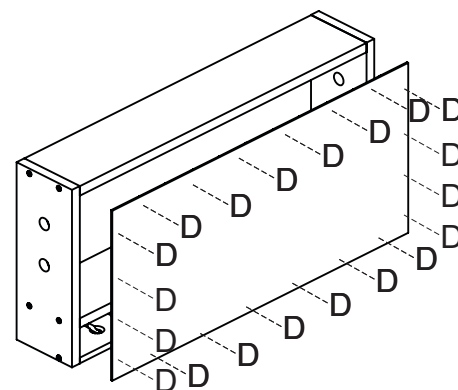

03




D	 PREGO	20
---	--	----

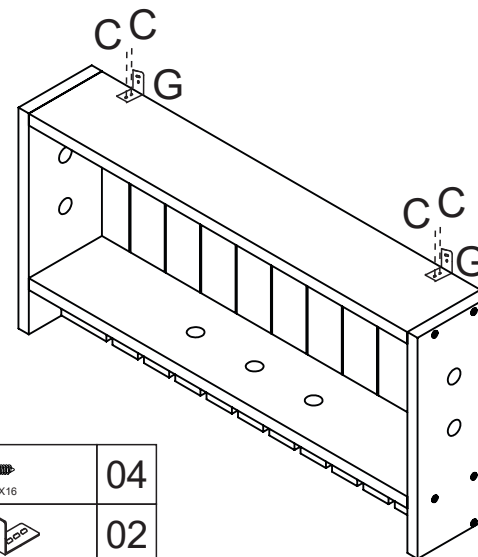

04



C	 3,5X16	04
G		02

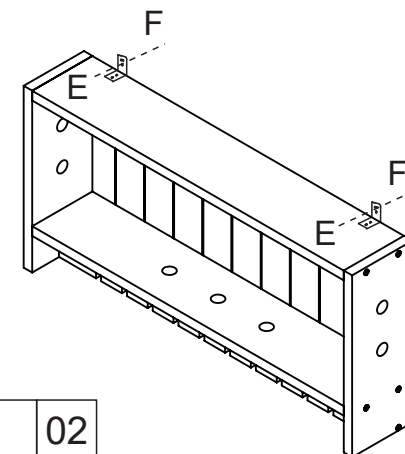05



E	 4X35	02
F	 BUCHA	02

☐ FERRAGENS

NOME DO CONFERENTE: \_\_\_\_\_

DATA: \_\_\_\_ / \_\_\_\_ / \_\_\_\_